


## **DFS-D LOBE PUMP FILLER**

- Automatic in-line filling system suited for the Diagnostic, Cosmetic/Personal Care, Food/Beverage, Household Products, and Chemical Specialty Industries
- Three Frame sizes available to handle up to 12 Lobe Pumps for fill rates of 10 to 200+ CPM
- Touch screen, filling parameters recipe recall allows for tool-less adjustments
- Multiple Rotary Lobe Pump models and sizes offered
- Dockable Trolley System reduces changeover time to as little as 5 minutes
- Attainable fill accuracies to  $\pm 1.0\%$  or better
- Handles moderate (detergent, salsa, syrups) and low (alcohol, water-thin liquids) viscosity products
- Best for moderate to large fills (50 ml to Gallons)
- Bottom-up, Locate, and Static fill modes for nozzle position control during filling
- Type 316 stainless steel product contact path
- Interlocked safety enclosure constructed of Lexan and stainless steel
- Cleaned by CIP (clean-in-place) or Remote CIP
- Fallen bottle, Infeed bottle supply, Discharge bottle back-up sensors on the container handling system
- Comprehensive setup, usage, drawings, and validation documentation available

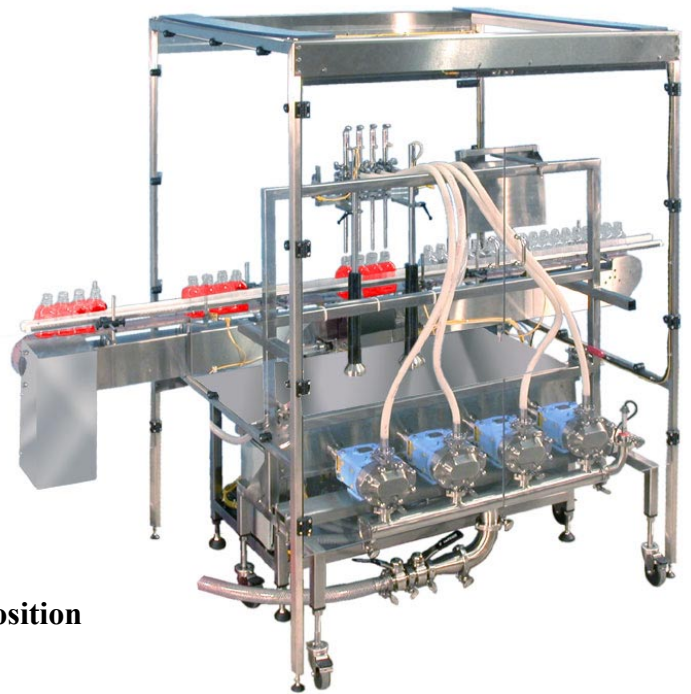

*Ask about optional enhancements*