

DFS Filler Piston Pump





- Three Frame Sizes to Handle up to 20 Piston Pumps
- Fill Rates of 10 to 200+ CPM
- Dockable Trolley System Reduces Changeover to as Little as 5 Minutes
- Tool-Less Adjustments
- Bottom-Up, Locate, and Static Fill Modes for Nozzle Position
- Handles Low to High Viscosities
- Type 316 Stainless Steel Product Path
- Fill Accuracies to +/- 1% or Better

DFS Specifications

Additional DFS Piston Features:

- Interlocked Safety Enclosure Constructed of Lexan and Stainless Steel
- Recipe Driven, Servo Controlled, Weight Compensation
- Comprehensive Setup, Usage, Drawings, and Validation Documentation Available
- Fallen Bottle, Infeed Bottle Supply, Discharge Bottle Back-Up Sensors on the Container Handling System

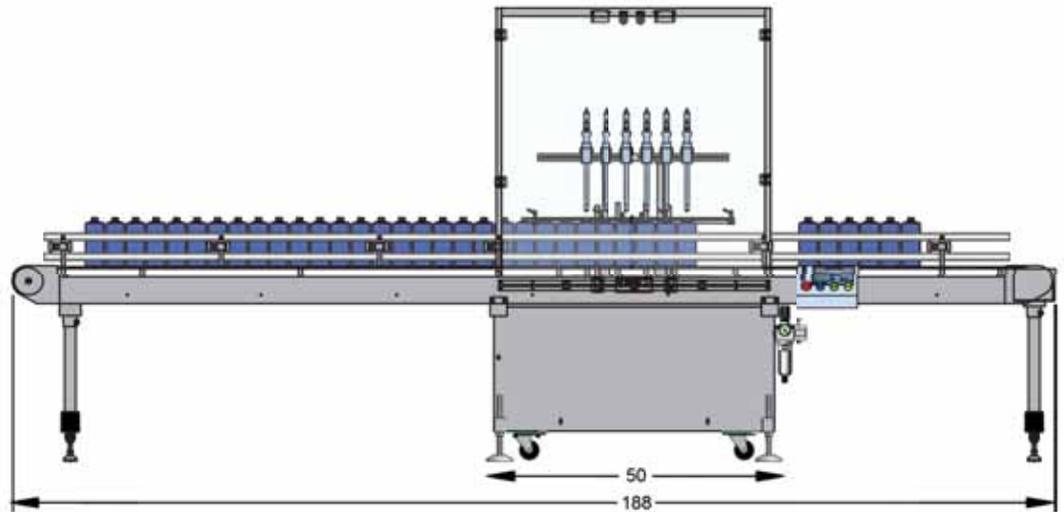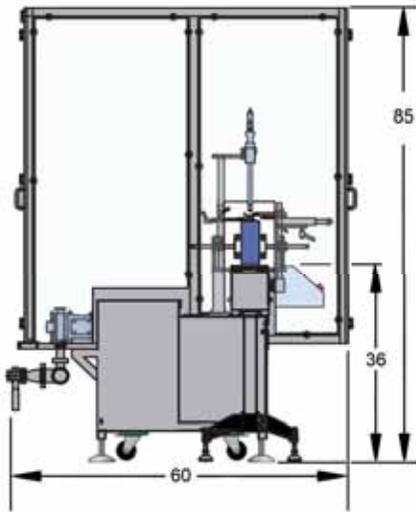

At Filamatic, our passion is to keep you productive and your filling operation running flawlessly. Ask about our "Peak Performace" Maintenance Program to keep your equipment in optimal condition. You can reach us at **866.258.1914** or **info@filamatic.com**.