


# FILAMATIC


## Type FKS Filling Units

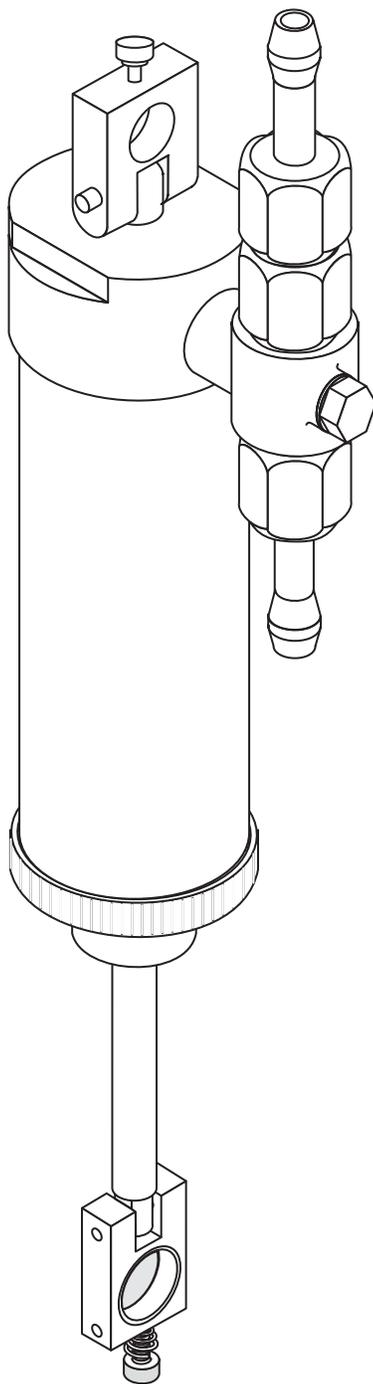

### Capacities: 0.3mL to 1100mL


*FKS:* These Filling Units are designed for dispensing semi-viscous liquids such as creams, shampoos, and oils. The fill volumes range from 0.3mL to 1100mL with an accuracy of 0.5%. Adjustable Teflon piston rings take all of the wear to provide many years of dispensing with no need to replace the stainless steel components. O-Ring piston seals are also available. The adjustable suck-suck back feature provides a sharp, clean cut-off even with stringy material.

### Piston Seal Options

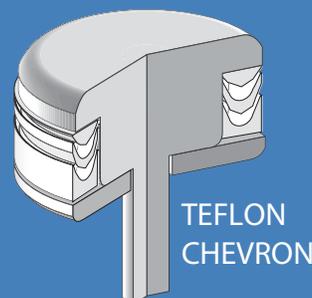

TEFLON  
CHEVRON

The most versatile and durable piston seal. Normal wear is compensated by tightening an adjustment stem.

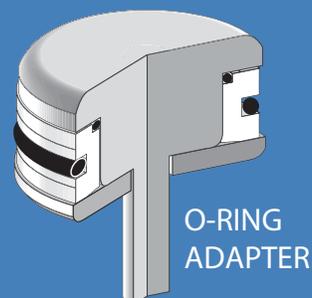

O-RING  
ADAPTER

Replaces chevron style and offers a more sanitary design.