


FILAMATIC

Type FUS/TP & FKS/TP Filling Units

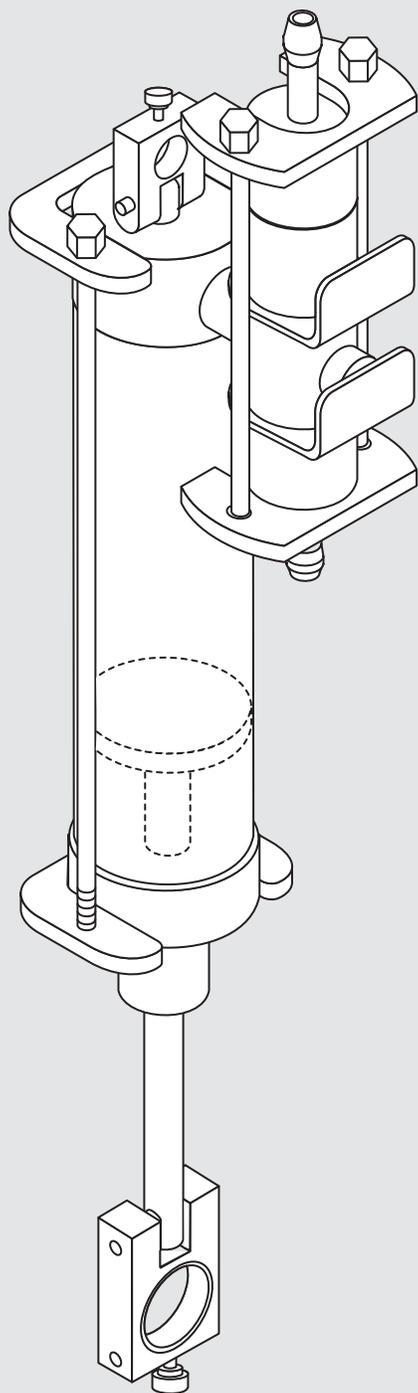

Capacities: 0.1mL to 1100mL

FUS/TP: Used for dispensing perfumes, alcohol, solvents, etc.

FKS/TP: Used for dispensing more viscous materials such as shampoo, light creams, oils etc.

Recommended for applications requiring frequent disassembly. Non-threaded tie-rod construction makes it easy to clean - eliminates cracks and crevices. Merely loosen a pair of clamps to disassemble the entire Filling Unit. Furnished completely with plastic tubing and nozzle. Comes standard with "O" ring piston seals.



"O" Ring Seals

Standard with Type FUS/TP and FKS/TP Filling Units. Optional for type FUS, FKS and FSV. Sanitary design, recommended for dispensing pharmaceuticals, food products, fast drying materials, and water-based liquids. Available in a wide variety of formulations for product compatibility.

FILAMATIC



Specialists in Liquid Filling Systems

NATIONAL INSTRUMENT, L.L.C.

BALTIMORE, MARYLAND 21215-2292, U.S.A.

PHONE: 866.258.1914 • www.filamatic.com