



H-Series - Automatic Filling System

General Overview

- Accommodates free-flowing to viscous products with a variety of container sizes and shapes
- Optional hazardous environment models available
- Expandable design
- Simple changeover process
- Quick volume adjustment
- Bottom-up, locate, and static fill modes for nozzle position control
- Easy-to-use programmable controller
- Optional HMI touchscreen and servo motor main drive
- Sanitary closed top conveyor



Unique Performance. Undeniable Quality. Unrivaled Support.
Go Further, Do More with FILAMATIC.

H-Series Automatic Filling System


866.258.1914
info@filamatic.com
www.filamatic.com



Technical Features

- Powerful machine that is easy-to-operate and maintain
- Free standing unit with stainless steel design and build
- Built-in leveling equipment for user-friendly control
- Fill accuracy +/- 0.5%
- Rates: H-300 up to 120 cpm and H-480 up to 160 cpm

Type of Filling Unit	Number of Filling Units	
	H-300	H-480
FSV/XL	8	14

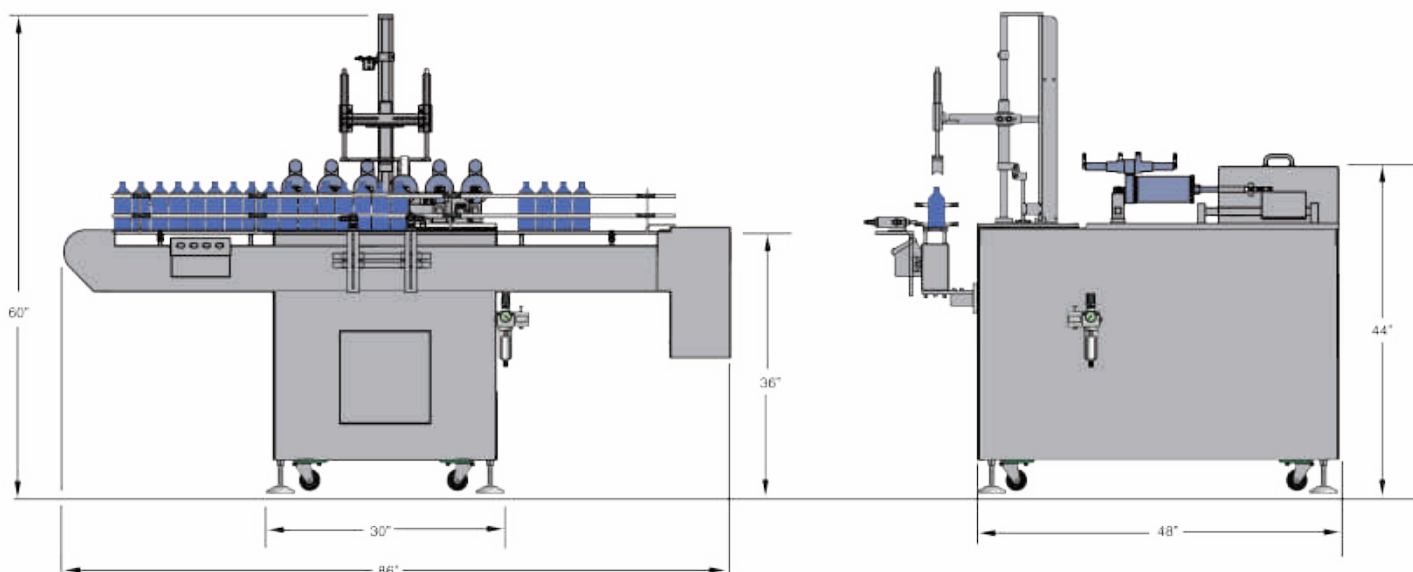

FILAMATIC

4119 Fordleigh Road • Baltimore, MD 21215
866.258.1914 • info@filamatic.com • www.filamatic.com