



## Molten Products - H-CE Automatic Filling System

### General Overview

- Fills liquids or liquefied solids up to 190 degrees fahrenheit
- Ideal for product fills up to 200 F
- Fills molten products (lipstick, lip balm, deodorants, candle wax, ointments) with ease and precision
- Fills up to 350 containers per minute
- 1ml to 1100ml volumes
- Product manifold allows an efficient and safe recirculation mode
- Surge tank or product manifold available



Unique Performance. Undeniable Quality. Unrivalled Support  
Go Further, Do More with FILAMATIC.



# Molten Products - H-CE Automatic Filling System

866.258.1914  
info@filamatic.com  
www.filamatic.com



## Technical Features

- Filling units can be disassembled in minutes for cleaning, or can be cleaned in place with an optional flush-back system
- Optional hazardous environment designs available
- Fill ranges from 1ml to 1100ml per stroke with a fill accuracy of  $\pm 0.5\%$
- Inline and gantry configurations
- Specific Application Models Available:
  - H-CE 730
  - H-CE 748
  - H-CE 1400
- Locate, bottom-up, or static fill modes
- Optional HMI touchscreen
- Servo-driven indexing or continuous-motion filling
- Integrates easily with puck loading/unloading upstream and downstream components such as conveyors, unscramblers, cappers, and labeling

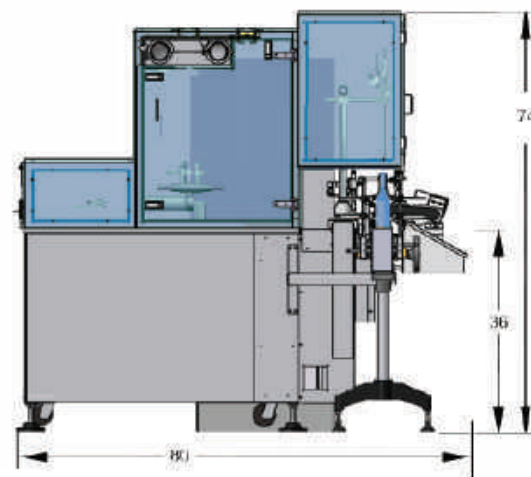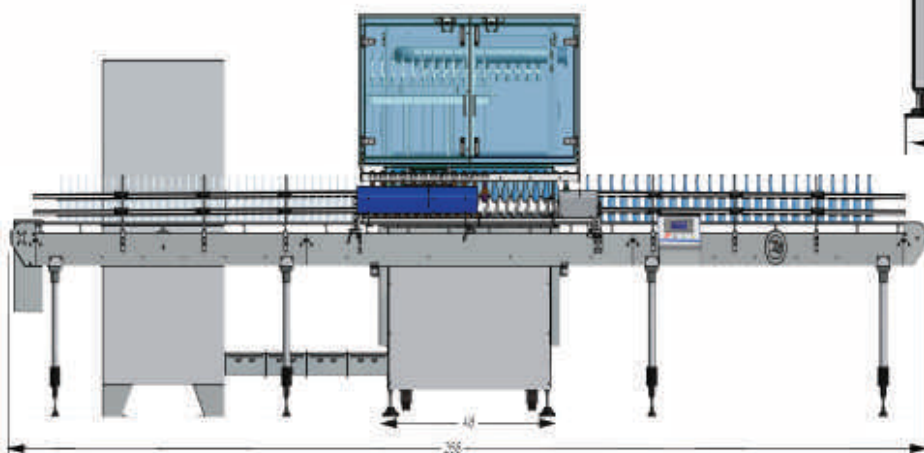

FILAMATIC

4119 Fordleigh Road • Baltimore, MD 21215  
866.258.1914 • [info@filamatic.com](mailto:info@filamatic.com) • [www.filamatic.com](http://www.filamatic.com)